

Replacement Instructions

1. Follow general instructions on back of pouch. Read instructions through before beginning installation. Have someone to hold and support the hood, hatch, liftgate or trunk while replacing the old lift supports.
2. Remove the mounting bracket from the vehicle body by unbolting. Keep original hardware for use on the new installation. Note the orientation of the original bracket on vehicle.
3. Loosen the jam nut on the rod-end of the old lift support and unscrew the lift support from the original end fitting. Remove the gas spring from the vehicle and keep the original hardware for use on new installation.
4. Remove the tube-end mounting bracket from the old lift support by drilling out the rivet attachment. After drilling out rivet attachment, enlarge hole to 5/16" diameter.
5. Attach the provided L-shaped bracket to the tube of the new lift support using the provided cap screw.
6. Attach the original bracket to new lift support as follows: 1) insert new pin through back of original bracket, 2) place nylon washer over pin. 3) insert pin through tube-end bracket, and 4) secure assembly with new e-clip.
7. Install original jam nut onto rod of new lift support, and screw rod into original end fitting on the hatch.
8. Install the tube-end bracket assembly onto the vehicle body using the original hardware.
9. Tighten jam nut against rod-end fitting.
10. Check that all connections are tight and secure.